

## BATTERY LOW WARNING

- Repeated beeping during an opening indicates that the battery is low and needs immediate replacement.
- Uses either one (1) 9-Volt Alkaline Battery or six (6) "C" cell batteries. LA GARD recommends the use of Duracell™ or Eveready™ Alkaline batteries. LA GARD recommends the replacement of batteries at least once annually.
- If internal battery is depleted and will not allow lock to open, hold a new 9-volt alkaline battery on the contact points (large battery terminal to large keypad contact, small to small) located on the front of the keypad. Maintain contact, enter a valid code and turn keypad to open lock. Change battery(s) as directed below. Lock contains a non-volatile memory, even with batteries removed the lock will retain all programming.


**NOTE:** You must maintain battery contact at all times throughout the entire procedure.

## CHANGING YOUR BATTERY

- ① Open safe door.
- ② Remove battery box cover by pulling the front portion away from the safe door.
- ③ The connector is easily removed by unsnapping it from the two terminals on the top of the battery.

### Never Pull on the Battery Leads


- ④ Connect a new 9-Volt Alkaline battery to the battery clip.
- ⑤ Push the battery and the leads completely up into the battery compartment.
- ⑥ Replace the cover and test the unit several times before closing the door

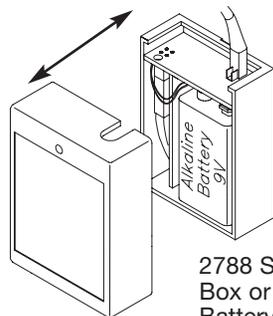

2788 Small Battery Box or 2789 Small Battery/Alarm Box

## CHANGING YOUR BATTERY

- ① Open safe door.
- ② Remove battery box cover by pulling the front portion away from the safe door.
- ③ Remove six "C" cell batteries.
- ④ Insert six new "C" cell batteries
- ⑤ Replace the cover and test the unit several times before closing the door

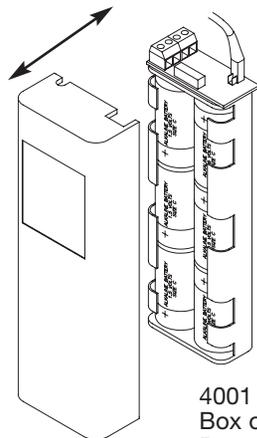

4001 Large Battery Box or 4002 Large Battery/Alarm Box




# COMBOGARD

## 3035 Electronic Entry Device

## USER OPERATING INSTRUCTIONS

Please see Manager Instructions for additional features that may be activated on your unit.

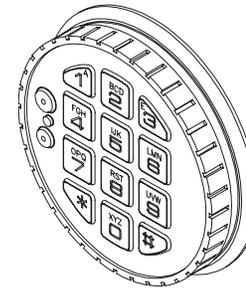

## FEATURES USER CODE

- Open Lock
- Change Code

## WRONG TRY PENALTY

- Four (4) consecutive invalid codes initiates five-minute delay period.

## LOW BATTERY WARNING

- Repeated audio and visual signal (LED flashing and repeated beeping) during opening indicates battery low.

## AUDIO AND VISUAL SIGNAL

- Double signal (LED flashes and unit beeps) indicates entry is valid or accepted.
- Triple signal indicates invalid or not accepted.

## OPENING THE LOCK

- ① Enter valid six (6) digit code.
- ② The lock will indicate a valid code entry with a double signal.
- ③ Within four (4) seconds, turn keypad to open position. (Clock-wise)
- ④ Pull door open.

- **Invalid Code Entry** - Lock will signal three (3) times.

## WRONG TRY PENALTY

- Entry of four (4) consecutive invalid codes starts a 5-minute delay period.
  - LED flashes red at ten (10) second intervals.
- At the end of the delay period, two more consecutive invalid codes will restart an additional 5-minute delay period.

*Entry will not respond to a single keystroke during delay period.*

## CHANGING YOUR CODE

### ALWAYS PERFORM THIS OPERATION WITH THE DOOR OPEN

- ① Enter "zero" six times.
- ② Enter your existing six (6) digit code one time.
- ③ Enter your NEW six (6) digit code two times.
- ④ If a mistake is made wait thirty (30) seconds and repeat steps ① - ③.
- ⑤ Test lock operation several times before closing the door.

- **Valid Code Entry** - Double signal after valid six (6) digit code is entered.
- **Invalid Code Entry** - Triple signal and old code is still valid.